

ReX Jeweller user manual

Updated May 29, 2026



ReX Jeweller is a range extender of communication signals that expands the radio communication range of Ajax devices fitted with a hub up to 2 times. Developed only for indoor use. It has a built-in tamper resistance and is equipped with a battery that provides up to 35 hours of operation without external power.




The extender is compatible only with the [Ajax hubs](#)! Connection to [uartBridge](#) and [ocBridge Plus](#) is not provided.

The device is configured via the [mobile application](#) for iOS and Android smartphones. Push-notifications, SMS messages and calls (if enabled) notify ReX Jeweller use about all events.

The Ajax system can be used for independent monitoring of the site and can be connected to the Central Monitoring Station of the security company.

- › Buy range extender ReX Jeweller


Functional elements

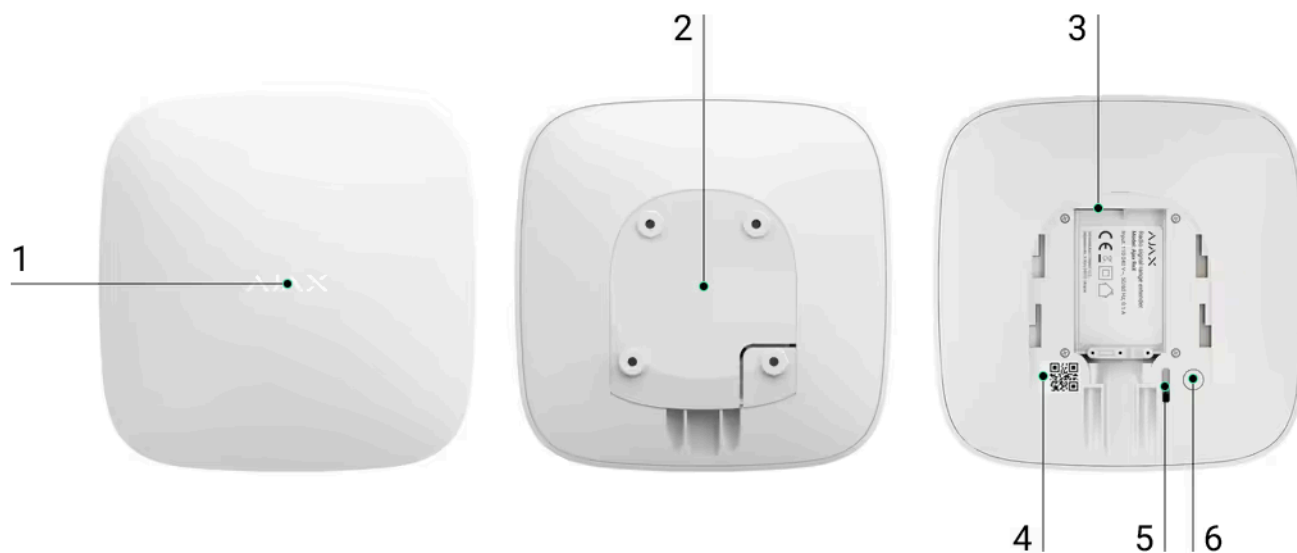

1. Logo with light indicator
2. SmartBracket attachment panel (perforated section is necessary to trigger the tamper during an attempt to lift the fixed ReX Jeweller from the surface)
3. Power connector
4. QR-code
5. Tamper button
6. Power button


Principle of operation

 ReX Jeweller expands the radio communication range of the security system all installation of Ajax devices at a greater distance away from the hub.]



The communication range between ReX Jeweller and the device is limited by the radio signal range of the device (indicated in the device specifications [on the website](#) and in the User Manual).

ReX receives hub signals and transmits them to the devices connected to ReX Jeweller, and transmits signals from the devices to the hub. The hub polls the extender every 12~300 seconds (by default: 36 seconds) while the alarms are communicated within 0.3 seconds.

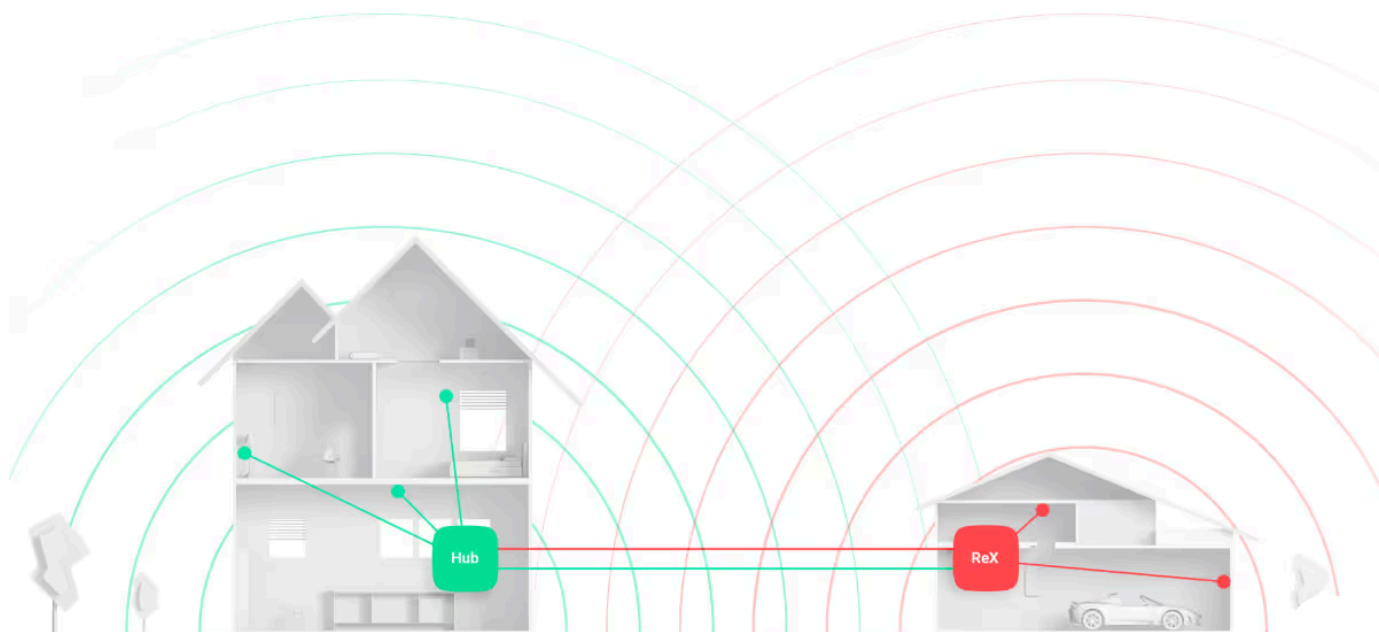

The number of connected ReX Jeweller

Depending on the hub model, the following number of range extenders can be connected to the hub:

Hub (2G) Jeweller	1 ReX Jeweller
Hub (4G) Jeweller	1 ReX Jeweller
Hub Plus Jeweller	up to 5 ReX Jeweller
Hub 2 (2G) Jeweller	up to 5 ReX Jeweller
Hub 2 (4G) Jeweller	up to 5 ReX Jeweller
Hub 2 Plus Jeweller	up to 5 ReX Jeweller
Hub BP Jeweller / Hub BP Jeweller (without casing)	up to 5 ReX Jeweller
Superior Hub G3 Jeweller	up to 5 ReX Jeweller
Superior Hub Hybrid (2G) / Superior Hub Hybrid (4G) / Superior Hub Hybrid (4G) (without casing)	up to 5 ReX Jeweller
Superior Hub Hybrid 2 / Superior Hub Hybrid 2 (without casing)	up to 5 ReX Jeweller

Connecting multiple ReX Jeweller to the hub is supported by devices with OS Malevich 2.8 and later. At the same time, ReX Jeweller can only be connected directly to the hub and connecting one range extender to another is not supported.



ReX Jeweller does not increase the number of devices connected to the hub!

Connection of ReX Jeweller to the hub



The hub and the device operating at different radio frequencies are incompatible. The radio-frequency range of the device may vary by region. We recommend purchasing

and using Ajax devices in the same region. You can check the range of operating radio frequencies with the [technical support service](#).

Before adding a device

1. Install the [Ajax app](#) or [Ajax PRO](#).
2. Log in to [an account](#) or create a new one.
3. Select a space or create a new one.

[What is a space](#)

[How to create a space](#)



The space functionality is available for apps of such versions or later:

- Ajax Security System 3.0 for iOS;
- Ajax Security System 3.0 for Android;
- Ajax PRO: Tool for Engineers 2.0 for iOS;
- Ajax PRO: Tool for Engineers 2.0 for Android;
- Ajax PRO Desktop 4.0 for macOS;
- Ajax PRO Desktop 4.0 for Windows.

4. Add at least one virtual room.
5. Add a [compatible hub](#) to the space. Ensure the hub is switched on and has internet access via Ethernet, Wi-Fi, and/or mobile network.
6. Ensure the space is disarmed, and the hub is not starting an update by checking statuses in the Ajax app.



Only users with administrator rights can add a device to the hub.

- i** Irrespective of the settings, you can connect up to 10 sirens or keypads with a built-in buzzer to ReX Jeweller.

ReX Jeweller running OS Malevich 2.33 and later versions supports connection of up to 10 sirens and up to 50 keypads with a built-in buzzer.

Connecting ReX Jeweller to the hub

1. Click **Add Device** in the Ajax application.
2. Name the extender, scan or manually enter the **QR-code** (located on the lid and package), and select the room where the device is located.



3. Click **Add** – the countdown begins.
4. Turn on ReX Jeweller by pressing the power button for 3 seconds – shortly after connecting to the hub the logo will change its color from red to white within 30 seconds after ReX Jeweller is switched on.




In order for detection and interfacing to occur, ReX Jeweller must be located within radio communication range of the hub (on the same guarded facility).

The request to connect to the hub is transmitted only when the device is enabled. If the connection to the hub fails, turn off the extender by pressing the power button for 3 seconds and retry the connection procedure after 5 seconds.

The extender connected to the hub will appear in the list of hub devices in the application. The updating of device statuses in the list depends on the polling time set in the hub settings; the default value is 36 seconds.


Choosing devices for operation via ReX Jeweller


In order to assign a device to the extender

1. Go to the ReX Jeweller settings (Devices → ReX Jeweller → Settings .
2. Press **Pair with device**.
3. Choose the devices that should operate via the extender. You can search by model name, device name, or ID, or filter by room or group.

[Learn more about searching and filtering](#)

4. Go back to the ReX Jeweller settings menu.


Once the connection is established, the selected devices will be marked with the  icon in the mobile application.

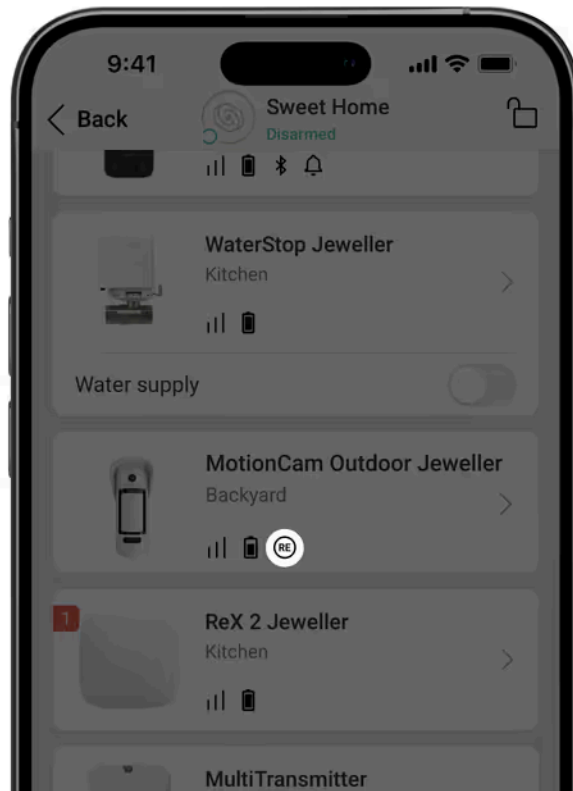

⚠ ReX Jeweller does not support pairing with MotionCam motion detector with visual alarm verification since the latter uses additional Wings radio protocol.

⚠ A device can only be paired with one ReX Jeweller. When a device is assigned to a range extender it is automatically disconnected from another connected range extender.

In order to assign a device to the hub

1. Go to the ReX Jeweller settings (Devices → ReX Jeweller → Settings .
2. Press **Pair with device**.
3. Uncheck the devices that need to be connected to the hub directly.
4. Go back to the ReX Jeweller settings menu.

[How to configure and connect an IP camera to the Ajax system](#)

ReX Jeweller states

1. Devices

2. ReX Jeweller

Parameter	Value
Data import	<p>Displays the error when transferring data to the new hub:</p> <ul style="list-style-type: none">• Failed – the device has not been transferred to the new hub. <p>Learn more</p>
Some functions do not work	<p>The field is displayed if the firmware versions of the hub and ReX Jeweller range extender do not match.</p> <p>ReX Jeweller updates within half an hour if the system is disarmed.</p> <p>To update the firmware, it is important to have a stable:</p> <ul style="list-style-type: none">• External power supply on the hub and the range extender.• Connection between the hub and the ReX Jeweller.• Hub connection to the internet. <p>How OS Malevich updates</p>
Jeweller Signal Strength	Signal strength between the hub and ReX Jeweller
Connection	Connection status between the hub and the extender
Transmitter power	<p>Displays the selected power of the transmitter.</p> <p>The parameter appears when the Max or Attenuation option is selected in the Signal attenuation test menu.</p> <p>Learn more</p>
Battery Charge	<p>Battery level of the device. Displayed as a percentage</p> <p>How battery charge is displayed in Ajax apps</p>
Lid	Tamper mode that reacts to an attempt to detach or violate the integrity of the extender body
External power	Availability of external power
Radio transmitter power	<p>The field is displayed if the Attenuation Test is enabled.</p> <ul style="list-style-type: none">• Maximum – the maximum power of the radio transmitter is set in the Attenuation Test.



	<ul style="list-style-type: none"> • Minimum – the minimum power of the radio transmitter is set in the Attenuation Test.
Permanent Deactivation	Shows the status of the device: active, completely disabled by the user, or only notifications about triggering of the device tamper button are disabled
Firmware	ReX Jeweller firmware version
Device ID	Identifier of the device

ReX Jeweller settings

1. Devices 


2. ReX Jeweller

3. Settings 

Item	Value
Name	Device name, can be edited
Room	Selection of a virtual room that the device is assigned to
Charging mode	<div style="border: 1px solid #ffc107; border-radius: 10px; padding: 10px; margin-bottom: 10px;">  This setting is only available in Ajax PRO apps. </div> <div style="border: 1px solid #28a745; border-radius: 10px; padding: 10px; margin-bottom: 10px;">  Available for ReX Jeweller operating with hubs with <u>OS Malevich 2.24</u> or higher. </div> <p>This setting defines how fast the device's built-in battery charges from an external source.</p> <p>Two options are available:</p> <ul style="list-style-type: none"> • Continuous – the battery charges non-stop until full. Compatible with most external power sources. • Interval – the battery charges with short breaks. Recommended for zinc-air power source.
LED Brightness	Adjusts the brightness of the logo light
Pair with device	Assignment of devices for the extender

Jeweller Signal Strength Test	Signal strength test between the extender and the hub
Signal Attenuation Test	<p>Switches the device to the signal attenuation test mode.</p> <p>During the test, the power of the radio transmitter is reduced or increased to simulate a change in the situation at the object and check the stability of communication between the detector and the hub (or the radio signal range extender).</p> <p>Learn more</p>
Permanent Deactivation	<p>Allows the user to disconnect the device without removing it from the system.</p> <p>Three options are available:</p> <ul style="list-style-type: none"> • No – the device operates normally and transmits all events • Entirely – the device will not execute system commands or participate in automation scenarios, and the system will ignore device alarms and other notifications • Lid only – the system will ignore only notifications about the triggering of the device tamper button <p>Learn more about permanent deactivation of devices</p> <p>Note that the system will ignore only the disabled device. Devices connected via ReX Jeweller will continue operating normally</p>
User Guide	Opening ReX Jeweller User Manual
Unpair device	Disconnecting the extender from the hub and deleting its settings

Malfunctions

ReX Jeweller can notify about malfunctions, if any. **Malfunctions** field is available in **Device States**. Clicking on  opens the list of all malfunctions. The field is displayed if a malfunction is detected.

Malfunction	Description	Solution
Some functions do not work.	The field is displayed if the firmware versions of the hub and ReX Jeweller range extender do not match.	Make sure that automatic updates are enabled in the hub settings. ReX Jeweller updates within half an hour if the system is disarmed and a new firmware version is available on the server.


Indication



The ReX Jeweller LED indicator may light red or white depending on the state of the device.

Event	State of logo with LED indicator
Device is connected to the hub	Constantly lights white
Device lost connection with the hub	Constantly lights red
No external power	Blinks every 10 seconds

Functionality testing

 The functionality testing of the associated to ReX Jeweller devices will be added to the next updates of OS Malevich.

The Ajax system allows conducting tests for checking the functionality of connected devices.

The tests do not start straight away but within a period of 36 seconds when using the standard settings. The test time start depends on the settings of the detector scanning period (the paragraph on “**Jeweller**” in hub settings).

You can test the Jeweller signal strength between the range extender and the hub, as well as between the range extender and the device connected to it.

To check the Jeweller signal strength between the range extender and the hub, go to the ReX Jeweller settings and select **Jeweller Signal Strength Test**.

To check the Jeweller signal strength between the range extender and device, go to the settings of the device connected to ReX Jeweller, and select **Jeweller Signal Strength Test**.


Jeweller Signal Strength Test

Device installation

Selection of the installation site

The location of ReX Jeweller determines its distance from the hub, the devices connected to the extender, and the presence of obstacles preventing the passage of the radio signal: walls, interfloor bridgings, and large objects located in the facility.

 The device developed only for indoor use.

 Check the signal strength at the installation site!

If the signal strength reaches just one bar on the indicator, the stable operation of the security system can not be guaranteed. Take whatever action is necessary to improve the quality of the signal! At the very least, move ReX Jeweller or hub – relocation even by 20 cm can significantly improve the reception quality.

Installation procedure

Before installing ReX Jeweller, be sure to choose the best location that meets the requirements of this guide! It is desirable for the extender to be hidden from direct view.

During mounting and operating, follow the general electrical safety rules when us electrical appliances as well as the requirements of electrical safety laws and regulations.

Device mounting

1. Fix the SmartBracket attachment panel with the bundled screws. If you choose to use other fasteners, make sure that they do not damage or deform the panel.



It is not recommended to use double-sided adhesive tape for installation. This can result in ReX Jeweller falling that can lead to malfunctioning of the device.

2. Slide ReX Jeweller onto the attachment panel. After installation, check the tamper status in the Ajax application and then the panel tightness.
3. In order to ensure higher reliability, fix ReX Jeweller to the SmartBracket panel with the bundled screws.



Do not flip the range extender when attaching vertically (for instance, on a wall). When properly fixed, the Ajax logo can be read horizontally.

You will receive a notification if an attempt to detach the extender from the surface or remove it from the attachment panel is detected.



It is strictly forbidden to disassemble the device connected to the power supply! Do not use the device with a damaged power cable. Do not disassemble or modify ReX Jeweller or its individual parts – this may interfere with the normal operation of the device or lead to its failure.

Don't place ReX Jeweller:

1. Outside the room (outdoors).
2. Near metal objects and mirrors that cause attenuation or screening of radio signals.
3. In rooms characterized by humidity and temperature levels beyond the permissible limits.

4. Close to radio interference sources: less than 1 meter from the router and power cables.

Maintenance of the device

Check the functionality of the Ajax system regularly.

Clean the body from dust, cobwebs, and other contaminants as they emerge. Use soft dry napkin suitable for equipment maintenance.

Do not use substances that contain alcohol, acetone, gasoline or other active solvents to clean the extender.

[How to replace ReX Jeweller radio signal range extender battery.](#)

Technical specifications

[All technical specifications of ReX Jeweller](#)

[Compliance with standards](#)

Warranty

Warranty for the Limited Liability Company “Ajax Systems Manufacturing” products is valid for 2 years after the purchase and does not apply to the pre-installed accumulator.

If the device does not work correctly, contact the support service first – technical issues can be resolved remotely in half of the cases!

[The full text of the warranty](#)

[User Agreement](#)

Contact Technical Support:

- [e-mail](#)
- [Telegram](#)



Need help?

Explore the full potential of an Ajax system through detailed manuals, articles, tools, and FAQs. For immediate assistance, our AI-powered chatbot and professional technical support team are available 24/7.

[Ask a question](#)

Subscribe

Subscribe to our emails about secure life. No spam.

Subscribe

Request extra help

- +447451279411
- support@ajax.systems
- @AjaxSystemsSupport_Bot
- Ask a question



Rating 4.8

4,500,000

people worldwide under Ajax protection

Suggest a feature



Products

 
- Intrusion protection
- Video surveillance
- Fire and life safety
- Comfort and automation
- All products
- Services
- System integrations
- Ajax Ready products
- Fibra wired protocol
- Ajax radio protocols

Solutions

- Customer stories
- Solutions by facility type

Software

- Ajax Security System
- Ajax PRO: Tool for Engineers
- Ajax Desktop
- Ajax PRO Desktop
- Ajax TV
- Ajax Translator PRO
- Ajax Cloud Signaling
- Ajax Media Player
- Scenarios



Support

- Manuals and articles
- Compliance with standards

[Commercial fire detection and alarm system](#)

[Wireless Grade 3 solution](#)

[Video surveillance solution](#)

[Integration with Yale smart locks](#)

[Upgrades and retrofits](#)

[Why Ajax](#)

[How it works](#)

Tools

[Ajax kit configurator](#)

[Ajax device compatibility](#)

[CMS software compatibility](#)

[Ajax Services availability](#)

[Video storage calculator](#)

[Video device calculator](#)

[Battery life calculator](#)

[Radio communication range calculator](#)

[Switches and outlets configurator](#)

[Fibra power supply calculator](#)

[All web tools](#)

Monitoring solutions and integrations

[Intrusion alarm monitoring](#)

[Video monitoring and visual alarm verification](#)

[Audio alarm verification](#)

Company

[Blog](#)

[About us](#)

[Press page](#)

[Events](#)

[Career](#)

[Ajax Next](#)

[Reviews and feedback](#)

For partners

[For partners](#)

[Ajax Academy](#)

[Partner Portal](#)

[Ajax PRO channel](#)

[🇬🇧 United Kingdom](#) [Privacy policy](#) [Report a vulnerability](#) [GDPR White Paper](#) [NDAA Statement](#) [Cookie policy](#)

[Anti-Spam Policy](#) [Ajax Services T&C](#) [End user agreement](#) [Warranty](#)

© 2026 AJAX SYSTEMS CH. All rights reserved