

ManualCallPoint Jeweller user manual

Updated June 17, 2026



ManualCallPoint Jeweller is a wireless resettable button featuring programmable scenarios. The device allows you to activate automation scenarios or alarms in case of an emergency. The button can be reset using the special tool (key) included in the kit. The device is designed for indoor installation only.

The button is available in several versions:


- [ManualCallPoint \(Blue\) Jeweller](#);
- [ManualCallPoint \(Green\) Jeweller](#);
- [ManualCallPoint \(Yellow\) Jeweller](#);
- [ManualCallPoint \(White\) Jeweller](#).

Each version has identical functionality. However, unlike the other versions, the default operating mode of **ManualCallPoint (Red) Jeweller** is Fire alarm. [Learn more](#)

To transmit alarms and events, **ManualCallPoint Jeweller** communicates with the hub or the control and indicating equipment (CIE) via the secure Jeweller protocol. The communication range is up to 1,700 meters without obstacles.

➤ **Buy ManualCallPoint Jeweller**

Functional elements

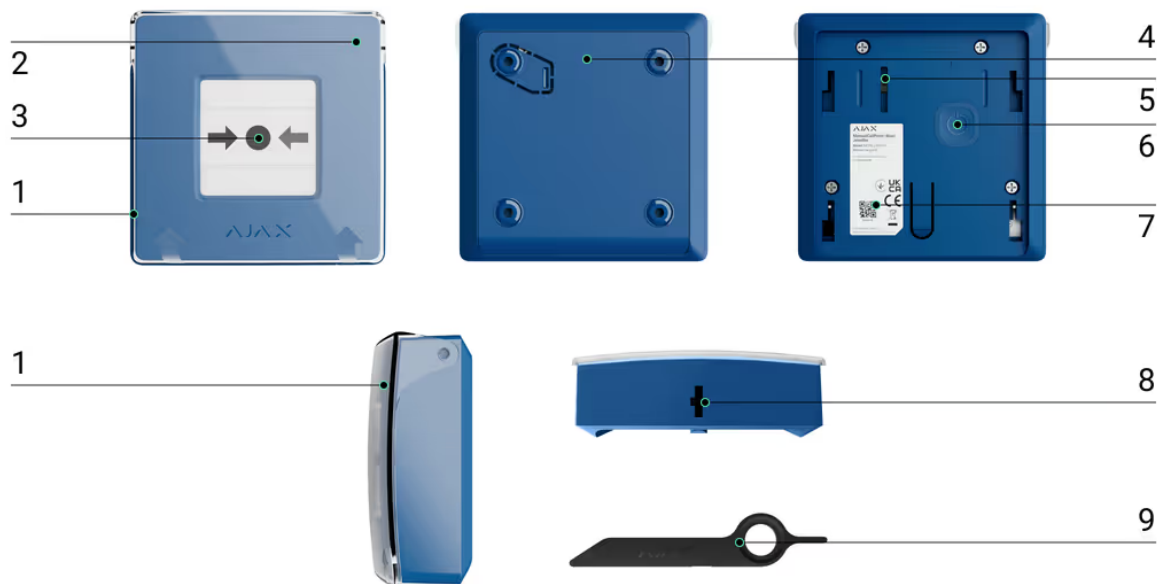

1. Transparent protective lid.
2. LED indicator.
3. Resettable frangible element.
4. SmartBracket mounting panel.
5. Tamper button. Triggers when someone tries to detach the button enclosure from the surface or remove it from the mounting panel.
6. Power button.
7. QR code with the device ID for pairing the button with an Ajax hub.
8. Hole for the special tool.
9. Special tool (key).


Compatible hubs, CIEs, and range extenders

ManualCallPoint Jeweller requires the Ajax hub or the Ajax CIE with an up-to-date [OS Malevich](#) version.

[Check devices compatibility](#).

Operating principle

ManualCallPoint Jeweller enables scenario or alarm triggering in case of an emergency. Lift the transparent protective lid (if installed) and press the central part (resettable frangible element) to activate. This action moves the frangible element inward, raising the alarm. Two yellow stripes will appear at the top and bottom, indicating the device's state.

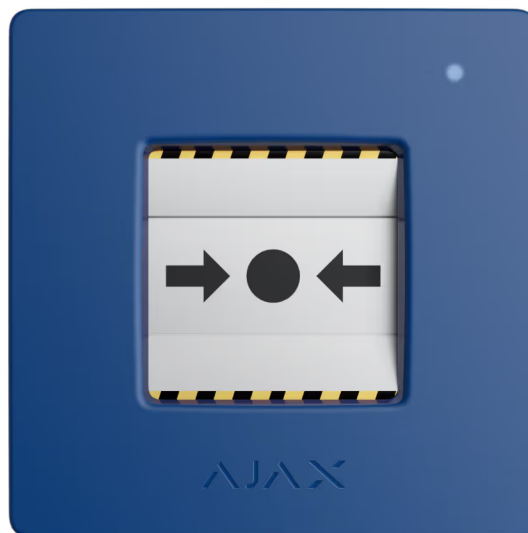

ManualCallPoint Jeweller can be added to the Ajax hub or the [Ajax CIE](#). The device's operation in the system depends on this.

When it is added to the Ajax hub

How to create and configure a scenario in the Ajax system

Operating modes

By default, the system activates Ajax automation devices through scenarios, such as turning the power of the devices on or off and unlocking the exit. Once ManualCallPoint Jeweller is triggered, users and a connected central monitoring station (CMS) receive a notification under the **Smart home** event tab. Resetting ManualCallPoint Jeweller with a special tool (key) can also activate a scenario.

How to create and configure a scenario in the Ajax system

Use **ManualCallPoint Jeweller** to alert about fire, potential gas or water leakage, devices issues, or other emergencies at the facility. Depending on the button settings, the system activates Ajax sirens after pressing ManualCallPoint Jeweller. When Fire alarm operating mode is enabled, the system additionally activates the built-in buzzers of Ajax fire detectors and the interconnected fire alarm if enabled. Sirens remain active until **ManualCallPoint Jeweller** is reset. To reset the device, insert the special bundled key into the corresponding hole.



After resetting, the button is ready to be reused.

The device features a transparent lid to prevent accidental presses during its installation and use. However, installing the lid is optional.

ManualCallPoint Jeweller operates in different modes: **Fire alarm**, **Auxiliary alarm**, **Panic button**, **Gas leak alarm**, **Malfunction alert**, **Water leak alarm**, and **Scenario trigger** (by default).

In all modes except **Scenario trigger**, the button raises an alarm regardless of the security mode and activates alarm scenarios involving this device. The system also transmits an alarm signal to the CMS and users in the app. The former is optional and can be configured in the button [settings](#).



The system can be configured to send **Critical alerts** that bypass “silent” or “do not disturb” phone settings.

[How to set up Critical alerts](#)

In the **Scenario trigger** mode, **ManualCallPoint Jeweller** allows you to control one or more [automation devices](#) by pressing the button.

To bind an automation device action to the **ManualCallPoint Jeweller** press, follow these steps:

1. Open the [Ajax app](#) and go to the **Devices**  tab.
2. Select **ManualCallPoint Jeweller** from the list of devices and go to the **Settings** by clicking the gear icon .
3. Select the **Scenario trigger** mode in the **Operating mode** section.
4. Go to the **Scenarios** menu. If you are creating a scenario for the first time, click **Create scenario**. If you have already created scenarios in the system, click **Add scenario**.
5. Select one or more automation devices to execute the action.
6. Enter the **Scenario name** and specify the **Device action** to be executed by pressing **ManualCallPoint Jeweller**:
 - Switch on;
 - Switch off.
7. If you've selected multiple devices, specify which of them will trigger the scenario: any from the list or all selected devices during the set time.



The **Device action** setting is unavailable when configuring a scenario for automation devices operating in pulse mode. When the scenario runs, these devices will close/open the contacts for a set time. You can adjust the operating mode and pulse duration in the automation device settings.

8. Click **Save**. The new scenario will now appear in the device scenarios list.

When it is added to the Ajax CIE

Ajax devices from the EN54 Line connected to the CIE are assigned to one of 40 **Fire zones**. When a fire is detected in any zone or **ManualCallPoint Jeweller** is pressed, all Ajax EN54 sounders and VADs across the facility raise an alarm, and the EN54 I/O Module (2X2) Jeweller relays are activated.

[Learn more about the EN54 Line operating principle](#)

ManualCallPoint Jeweller supports fire alarm scenarios. Configured in space settings, these scenarios enable automated actions in response to specific triggers and alarms.

› How to set up a fire alarm scenario

ManualCallPoint Jeweller operates in different modes: **Fire alarm**, **Evacuation**, **Auxiliary alarm**, **Panic button**, **Gas leak alarm**, **Fault alert**, **Water leak alarm**, and **Custom action** (by default).

In all modes except Custom action, the button raises an alarm regardless of the security mode and activates alarm scenarios involving this device. The system also transmits an alarm signal to the CMS and users in the app. The former is optional and can be configured in the button settings.

The device operating in the **Fire alarm** mode supports the **Coincidence detection** feature that allows alarm confirmation only if two or more independent detectors or actuators are triggered within a defined time window. If ManualCallPoint Jeweller operating in the **Evacuation** mode is activated, the system enters the **Full alarm state** immediately.

› How to configure Coincidence detection in EN54 Line systems

Sending events to the monitoring station

The Ajax system can transmit alarms to both PRO Desktop monitoring app and the CMS in the formats of **SurGard (Contact ID)**, **SIA DC-09 (SIA-DCS)**, **ADEMCO 685**, and other protocols.

ManualCallPoint Jeweller can transmit the following events:

1. Fire alarm / recovery.
2. Panic button alarm / recovery.
3. Auxiliary alarm / recovery.
4. Gas leak alarm / recovery.
5. Malfunction or fault alarm / recovery.
6. Water leak alarm / recovery.
7. Scenario trigger / custom action.
8. Tamper alarm / recovery.
9. Loss/restoration of connection with the hub or the CIE.
10. Permanent deactivation/activation of the button.



The system allows disabling fault indication and notifications of Jeweller connection loss for EN54 devices used in mobile environments, such as fire engines.

[How to disable Jeweller connection loss notifications for EN54 devices](#)

When an alarm is received, the operator at the security company's CMS knows what happened and precisely where to dispatch a rapid response team. The addressability of Ajax devices allows sending events to PRO Desktop or the CMS, including the device type, its name, virtual room, security group or fire zone and location description. Note that the list of transmitted parameters may vary depending on the CMS type and the selected communication protocol for it.



The ID and the loop (zone) number of the device can be found in its [states in the Ajax app](#).

Adding to the system



ManualCallPoint Jeweller is incompatible with Hub (2G) Jeweller, third-party security control panels, or ocBridge Plus and uartBridge integration modules.

To connect **ManualCallPoint Jeweller** to the hub or the CIE, the device must be located at the same secured facility as the system (within the hub's or the CIE's radio network range).

When using a radio signal range extender, first add ManualCallPoint Jeweller to the hub or the CIE, then connect it to the range extender in its settings. The EN54 Fire ReX Jeweller range extender, compatible with the CIE, will be available later.



The hub or the CIE and the device operating at different radio frequencies are incompatible. The radio-frequency range of the device may vary by region. We recommend purchasing and using Ajax devices in the same region. You can verify the range of operating radio frequencies with the technical support service.

Before adding a device

1. Install the Ajax app.
2. Log in to your account or create a new one.
3. Select a space or create a new one.

What is a space

How to create a space

4. Add at least one virtual room.
5. Add a compatible hub or CIE to the space. Ensure the hub or the CIE is switched on and has internet access via Ethernet, Wi-Fi, and/or mobile network.
6. Ensure the space is disarmed, and the hub or the CIE is not starting an update by checking statuses in the Ajax app.



Only a PRO or a space admin with the rights to configure the system can add a dev to the hub or the CIE.

Connecting to the hub or the CIE.

1. Open an Ajax app. Select a space to which you want to add the device.
2. Go to the **Devices**  tab and tap **Add device**.
3. Scan the QR code or enter the device ID manually. A QR code with the ID is placed on the device enclosure under the SmartBracket mounting panel. Also, it is duplicated on the device packaging.
4. Assign a name to the device.
5. Select a virtual room.
6. If ManualCallPoint Jeweller connects to the hub, select a security group (if Group mode is enabled). If ManualCallPoint Jeweller connects to the CIE, select a fire zone and specify the device location in the **Location** field.
7. Select **Add device**, and the countdown will begin.
8. Switch on the device by holding the power button. Once the device is added, the LED will flash once.



When connecting ManualCallPoint Jeweller via the radio signal range extender, the button won't automatically switch between the radio networks of the range extender and the hub. However, you can manually assign ManualCallPoint Jeweller to another hub or range extender in the app.

If you've reached the maximum number of devices the hub or the CIE can support (depending on the model), you'll receive a notification when attempting to add another device.

Once connected to the hub or the CIE, the button will appear in the list of its devices in the Ajax app.



ManualCallPoint Jeweller works with one hub or CIE. When connected to a new hub or CIE, the device stops sending events to the old one. Adding the button to a new hub or CIE does not automatically remove it from the device list of the old one. This must be done through the Ajax app.

Faults

When ManualCallPoint Jeweller is added to the hub, the system indicates a malfunction. When the device is added to the CIE, the system indicates a fault. According to the EN 54 standard, a fault is a critical condition that affects the operation of the fire alarm system.

When a malfunction or a fault is detected, the Ajax app displays a counter on the device icon. All malfunctions and faults are indicated in the device's states. Corresponding fields will be highlighted in red.

A malfunction or a fault is displayed if:

- no connection with the hub (or the CIE) or radio signal range extender via Jeweller;
- the button battery is low.

An admin or a user with **access level 2** can disable the notifications of Jeweller connection loss. The **Deactivate notifications** feature allows disabling malfunction indication and notifications of Jeweller connection loss for EN54 devices used in mobile environments, such as fire engines.

[How to disable Jeweller connection loss notifications for EN54 devices](#)

Icons

The icons in the app display some **ManualCallPoint Jeweller** states. To access them:

1. Sign in to the [Ajax app](#).
2. Select a [space](#).
3. Go to the **Devices**  tab.

Icon	Value
	Jeweller signal strength displays the signal strength between the hub or the CIE and the button. The recommended value is 2–3 bars when ManualCallPoint Jeweller is added to the hub, and 3 bars when the device is added to the CIE. <u>Learn more</u>
	Battery charge level of the button. <u>Learn more</u>

	The button operates via a <u>radio signal range extender</u> .
	The button test is in progress.
	The button has a fault. The list of faults is available in the <u>device states</u> .
	The button is pressed.
	The button is permanently deactivated. The icon may be displayed if ManualCallPoint Jeweller is added to the hub. Learn more
	The button has tamper alarms permanently deactivated. The icon may be displayed if ManualCallPoint Jeweller is added to the hub. Learn more
	The button is disabled. The icon may be displayed if ManualCallPoint Jeweller is added to the CIE.
	The device has lost connection with the hub (the CIE) or the hub (the CIE) has lost connection with the Ajax Cloud server.
	The device has not been transferred to the new hub or CIE. Learn more

States

The states include information about the device and its operating parameters. You can find the states of ManualCallPoint Jeweller in Ajax apps:

1. Go to the **Devices**  tab.
2. Select **ManualCallPoint Jeweller** from the list.

Parameter	Value
Alarm	The button has been pressed in Fire alarm or Evacuation mode. The field is displayed only if a fire is detected.
Data import	Displays the error when transferring data to the new hub or CIE: • Failed — the device has not been transferred to the new hub or CIE.

	Learn more
Fault	Click the  button to open the list of the device faults. The field appears only if a fault is detected. A fault is a critical interferer for fire alarm system operation according to the EN 54 standard.
Malfunction	Click the  button to open the list of the device malfunctions. The field appears only if a malfunction is detected. A malfunction is not a critical interferer for fire alarm system operation according to the EN 54 standard.
Disabled	The device is disabled. It does not respond to the alarm or notify users and the monitoring station. Tapping on  opens a list of disabled device functions. The field is displayed only if the device is disabled.
Test	The device test is in progress. The field is displayed only if ManualCallPoint Jeweller is added to the CIE.
Temperature	Temperature of the device. It is measured on the processor and changes depending on the ambient temperature. You can configure a scenario by temperature to control automation devices. Learn more
Jeweller Signal Strength	Signal strength between the hub (the CIE) or range extender and the button on the Jeweller channel. The recommended value is 2–3 bars when ManualCallPoint Jeweller is added to the hub, and 3 bars when added to the CIE.
Connection via Jeweller	Connection status on the Jeweller channel between the device and the hub (the CIE) or the range extender: • Online — the device is connected to the hub (the CIE) or the range extender. Normal status. • Offline — the device is not connected to the hub (the CIE) or the range extender. Check the button connection.
ReX	Connection status between the device and the radio signal range extender.
Battery Charge	Battery charge level of the device. Two states are available: • OK.

	• Low. How battery charge is displayed in Ajax apps
Lid	The status of the button tamper that responds to detachment or opening of the device enclosure: • Open – the button was removed from the SmartBracket mounting panel, or its integrity was compromised. Please check the device's mounting. • Closed – the button is installed on the SmartBracket mounting panel, and both the device enclosure and mounting panel remain uncompromised. Normal status. Learn more
Current state	If the device is operating in Fire alarm, Evacuation, Auxiliary alarm, Panic button, Gas leak alarm, Malfunction alert, or Water leak alarm modes: • Alarm – button pressed; • No alarm – button not pressed. If the device is operating in the Scenario trigger or Custom action mode: • Button pressed; • Button not pressed.
Operating Mode	When ManualCallPoint Jeweller is added to the hub, the button operating modes are: • Fire alarm. • Scenario trigger. • Auxiliary alarm. • Panic button. • Gas leak alarm. • Malfunction alert. • Water leak alarm. When ManualCallPoint Jeweller is added to the CIE, the button operating modes are: • Fire alarm. • Evacuation. • Auxiliary alarm. • Fault alert. • Panic button. • Gas leak alarm.

	• Water leak alarm. • Custom action.
Local Alarm Only	When enabled, an alarm from this device will not send a signal to the central monitoring station. However, alarms from interconnected fire detectors are activated regardless of the state of this toggle.
Permanent Deactivation	Status of the device's permanent deactivation setting: • No – the device operates in normal mode and transmits all events. • Entirely – the device does not execute system commands, does not participate in automation scenarios, and its alarms and other notifications are ignored by the system. • Lid only – the system ignores notifications triggered by the device's tamper. Learn more
Fire zone	Number and name of the fire zone to which the device is assigned. The field is displayed only if ManualCallPoint Jeweller is added to the CIE.
Room	Name of the room to which the device is assigned.
Location	Detailed description of the device location. The field is displayed only if ManualCallPoint Jeweller is added to the CIE.
Firmware	ManualCallPoint Jeweller firmware version.
Device ID	Device ID. Also available on the QR code on both the button enclosure and its packaging.
Device No.	Number of the device loop (zone).

Settings

To change ManualCallPoint Jeweller settings, in the Ajax app:

1. Go to the **Devices**  tab.
2. Select **ManualCallPoint Jeweller** from the list.
3. Go to **Settings** by clicking on the  icon.

4. Set the required parameters.

5. Click **Back** to save the new settings.

Parameter	Value
Name	Name of the device. Can be changed.
Fire zone	Selecting the fire zone to which ManualCallPoint Jeweller is assigned. The fire zone is displayed in the text of SMS and notifications in the event feed. The setting is available only if ManualCallPoint Jeweller is added to the CIE.
Room	Selecting the virtual room to which ManualCallPoint Jeweller is assigned.
Location	Detailed description of the device location. It is displayed next to the room name in the event feed notifications. The location field can contain up to 24 Latin or Cyrillic characters. The setting is available only if ManualCallPoint Jeweller is added to the CIE.
Operating mode	Selecting the button operating mode: • Fire alarm — alerts about fire in the facility. • Evacuation — activates evacuation signal in case of fire hazard. The mode is available only if ManualCallPoint Jeweller is added to the CIE. • Scenario trigger or Custom action — runs scenarios for <u>automation devices</u> like relays, sockets, or switches. The system doesn't send an alarm to users and CMS. • Auxiliary alarm — alerts when emergency help is needed. • Panic button — alerts when personal or property safety is threatened. • Gas leak alarm — alerts about potential gas leaks. • Malfunction/fault alert — notifies about issues with safety or control devices within premises. • Water leak alarm — alerts about leakage. After pressing the button in all modes except Scenario trigger or Custom action, an alarm is sent to the Ajax app and CMS, and scenarios in which the button is involved are activated.

Local alarm only	When enabled, an alarm from this device will not send a signal to the central monitoring station. However, alarms from interconnected fire detectors are activated regardless of the state of this toggle.
Alert with siren	
If MCP button is pressed	When enabled, pressing the button will activate any <u>sirens</u> that have been added to the system. The setting is available only if ManualCallPoint Jeweller is added to the hub.
Scenarios	Opens the menu to create and configure the automation scenarios. The setting is available only if ManualCallPoint Jeweller is added to the hub.
Jeweller signal strength test	Allows the user to determine signal strength and stability in the intended installation place. Learn more
User guide	Opens ManualCallPoint Jeweller user manual.
Permanent deactivation	Allows the user to deactivate the device without removing it from the system. Three options are available: • No – the device operates in normal mode and transmits all events. • Entirely – the device does not execute system commands or participate in automation scenarios; additionally, the system ignores alarms and other device notifications. • Lid only – the system ignores the device tamper triggering notifications. Learn more The setting is available only if ManualCallPoint Jeweller is added to the hub.
Device disablement	The option allows for deactivating the device or its specific functions. The device remains within the system, but will no longer raise an alarm. The setting is available only if ManualCallPoint Jeweller is added to the CIE.

Delete device	Disconnects ManualCallPoint Jeweller from the hub or the CIE and deletes its settings.
---------------	--

Indication

ManualCallPoint Jeweller informs about its state with an LED indication in the upper right corner of the device.

Category	Indication	Event
Alarm.	The LED flashes continuously.	The LED flashes as long as the frangible element is pressed.
Tamper alarm.	The LED flashes once.	The button is removed from the SmartBracket mounting panel.
Turning on the button.	The LED flashes once.	To turn on the button, hold the power button for 1 second.
Turning off the button.	The LED flashes three times.	To turn off the button, hold the power button for 2 seconds.
Malfunction detected.	The LED flashes continuously.	
Low battery level.	The LED flashes once per minute.	
Battery completely drained.	The LED flashes rapidly for a short time.	

Functionality testing

The Ajax system offers several types of tests to assist in selecting the correct installation location for the devices. These tests do not start immediately. However, the waiting time does not exceed the duration of one “hub—device” polling interval. You can check and configure the polling interval in the hub or CIE settings (Hub (CIE) → **Settings**  → **Jeweller** or **Jeweller/Fibra**).

To run a test, in the Ajax app:

1. Select the required space.
2. Go to the **Devices**  tab.
3. Select **ManualCallPoint Jeweller** from the list.

4. Go to **Settings** .
5. Select Jeweller signal strength test.
6. Run the test.

Device placement



The device is designed for indoor use only.

When choosing a location for ManualCallPoint Jeweller, consider the parameters that affect its operation:

- Jeweller signal strength;
- the distance between the device and the hub (the CIE) or radio signal range extender;
- the presence of barriers that might hinder radio signal transmission between devices, such as walls, interfloor ceilings, or large objects located in the premises.



ManualCallPoint Jeweller should be located on escape routes, particularly at all storey exits and all exits to open air leading to an ultimate place of safety (even if these exits are not labeled as fire exits).

ManualCallPoint Jeweller should be fixed at a height of 1.4 m above the finished floor level, in easily accessible, well-illuminated, and conspicuous positions free from potential obstruction. They should be set against a contrasting background for easy recognition. A lower mounting height is acceptable if there's a high likelihood that the first person to raise a fire alarm will be a wheelchair user.

Consider the placement recommendations when designing the security system project for the facility. The security system should be designed and installed by professionals. A list of recommended partners is [available here](#).

Signal strength

The Jeweller signal strength is determined by the number of undelivered or corrupted data packages over a certain period of time. The icon  on the **Devices**  tab indicates the signal strength:

- **three bars** — excellent signal strength;
- **two bars** — good signal strength;
- **one bar** — low signal strength, stable operation is not guaranteed;
- **crossed out icon** — no signal.



Run the Jeweller signal strength test before final installation. The test checks the signal strength at the device's maximum transmission power. To comply with the EN 54 requirements, the signal strength between the device and the CIE must be three bars.

If the test shows the signal strength of one or zero bars, we do not guarantee stable operation of the device. Consider relocating the device, as adjusting its position even by 20 cm can significantly improve the signal strength. If the signal remains poor or unstable after relocation, consider using [a radio signal range extender](#).

How not to install the button

1. Outdoors, as it can lead to false alarms and device failure.
2. Inside premises with temperature and humidity levels outside the permissible limits, as this can damage the device.
3. Closer than 1 meter to the hub (the CIE) or radio signal range extender to prevent connection loss with the hub.
4. In areas with low or unstable signal strength, this may result in connection loss with the hub or the CIE.
5. In hard-to-reach or poorly-lit places.

Installation



Before installing ManualCallPoint Jeweller, ensure that you have selected the optimal location that complies with the requirements of this manual.

To mount the button:

1. Remove the SmartBracket mounting panel from the button. To do this, insert the special tool into the hole and slide the mounting plate down.



2. Fix the SmartBracket mounting panel using double-sided tape or other temporary fasteners. Place the mounting panel on a vertical surface at a height of **1.4 meters**.



Use double-sided tape only for temporary attachment. If the device is only attached with tape, it may detach from the surface at any time, and the tamper will not trigger if the device is removed.

3. Place the button, with the transparent lid closed, onto the SmartBracket mounting panel. The device's LED indicator will flash, signaling the tamper on the button is closed.
4. Run the Jeweller signal strength test. Aim for a signal strength of two or three bars.
5. Remove the button from SmartBracket.

6. Securely attach the SmartBracket mounting panel using the bundled screws at all fixation points. One fixation point is in the perforated part of the mounting panel, above the tamper. If using alternative fasteners, ensure they do not damage or deform the mounting panel.
7. Reattach the button onto the SmartBracket mounting panel.

The special tool has a hole in its enclosure, making it handy to carry. Those responsible for fire safety might find it convenient to attach the special tool to their keychain.

Actions to take in case of a fire alarm



NEVER IGNORE THE ALARM! Always assume the alarm is real, and evacuate from the premises immediately, even if you have doubts about the cause of the alarm signal.

1. Don't open doors if you feel heat or smoke behind them. Check other exits and use an alternative escape route. Always close doors behind you when leaving.



If heavy smoke enters a room, stay close to the floor and crawl out. If possible, breathe through a wet cloth or try to hold your breath. Be aware that smoke inhalation causes more death than fire.

2. Evacuate as quickly as you can, don't panic. Save time, don't pack your things. Arrange a meeting place outside for everyone in the building. Ensure everyone has evacuated safely.
3. Call the fire department immediately, or ask someone nearby. Remember, even small fires can spread rapidly; call the fire department even if the alarm is automatically transmitted to a monitoring station.



NEVER come back to the house on fire.

Maintenance

Clean the device's enclosure to remove dust, cobwebs, and other contaminants as they emerge. Use soft, dry wipes suitable for cleaning electronic equipment. Avoid using substances that contain alcohol, acetone, petrol, and other active solvents when cleaning the device.

The pre-installed battery lasts up to 7 years with typical use (one press of one minute per week). Using it more often may reduce its lifespan. You can monitor the battery level at any time in the Ajax app.

Technical specifications

[All technical specifications of ManualCallPoint \(Blue\) Jeweller](#)

[All technical specifications of ManualCallPoint \(Green\) Jeweller](#)

[All technical specifications of ManualCallPoint \(Yellow\) Jeweller](#)

[All technical specifications of ManualCallPoint \(White\) Jeweller](#)

[Compliance with standards](#)

Warranty

Warranty for the Limited Liability Company "Ajax Systems Manufacturing" products is valid for 2 years after the date of purchase.

If you encounter any issues with the device's functionality, we recommend contacting Ajax Technical Support first. In most cases, technical issues can be resolved remotely.

[Warranty obligations](#)

[User agreement](#)

Contact Technical Support:

- [email](#)
- [Telegram](#)

Manufactured by "AS Manufacturing" LLC



Need help?

Explore the full potential of an Ajax system through detailed manuals, articles, tools, and FAQs. For immediate assistance, our AI-powered chatbot and professional technical support team are available 24/7.

[Ask a question](#)

Subscribe

Subscribe to our emails about secure life. No spam.

[Subscribe](#)

Ajax PRO on YouTube

Watch product demos, field-tested tips, and expert insights from security professionals.

[Subscribe](#)

Request extra help

 +447451279411

 support@ajax.systems

 [@AjaxSystemsSupport_Bot](#)

 [Ask a question](#)



Rating 4.8

4,500,000

people worldwide under Ajax protection

 [Suggest a feature](#)



Products

[Intrusion protection](#)

[Video surveillance](#)

[Fire and life safety](#)

[Comfort and automation](#)

[All products](#)

[Services](#)

[System integrations](#)

[Ajax Ready products](#)

[Fibra wired protocol](#)

[Ajax radio protocols](#)

Software

[Ajax Security System](#)

[Ajax PRO: Tool for Engineers](#)

[Ajax Desktop](#)

[Ajax PRO Desktop](#)

[Ajax Response](#)

[Ajax TV](#)

[Ajax Translator PRO](#)


[Ajax Cloud Signaling](#)

[Ajax Media Player](#)

[Scenarios](#)



Available on
App Store



Solutions

Customer stories

Solutions by facility type

Commercial fire detection and alarm system

Wireless Grade 3 solution

Wired Grade 3 solution

Video surveillance solution

Integration with Yale smart locks

Water damage prevention

Upgrades and retrofits

Why Ajax

How it works

Support

Manuals and articles

Compliance with standards

Tools

Ajax kit configurator

Ajax device compatibility

CMS software compatibility

Ajax Services availability

Video storage calculator

Video device calculator

Battery life calculator

Radio communication range calculator

Switches and outlets configurator

Fibra power supply calculator

All web tools

Monitoring solutions and integrations

Intrusion alarm monitoring

Video monitoring and visual alarm verification

Audio alarm verification

Company

Blog

About us

Press page

Events

Career

Ajax Next

Ajax PRO channel

Reviews and feedback

For partners

For partners

Ajax Academy

Partner Portal

Ajax PRO channel

